
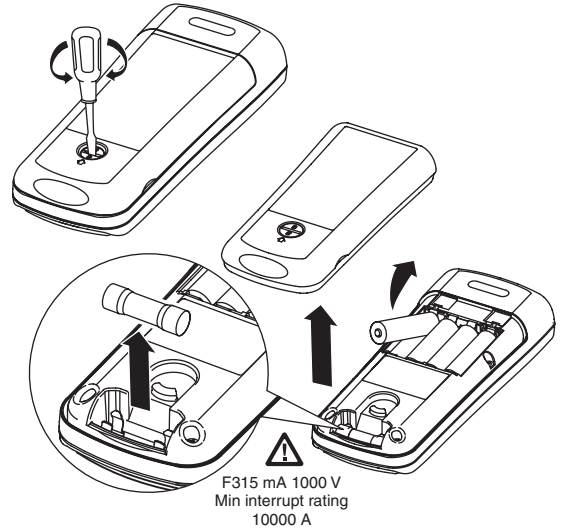



### 1507/1503 Insulation Tester Quick Reference Guide

 See Users Manual for "Safety Information" and complete operating information.


#### Fuse Test

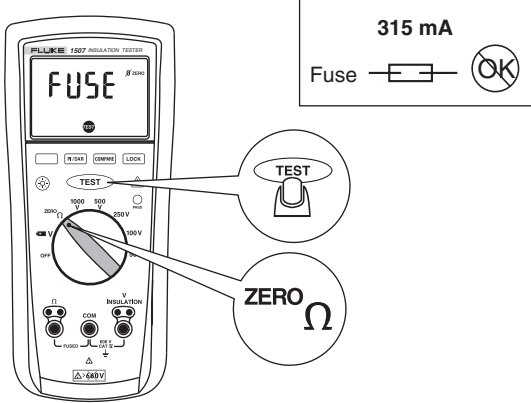


#### Battery Test

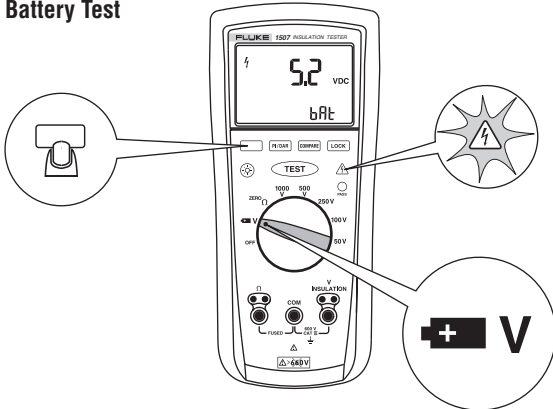


#### Voltage

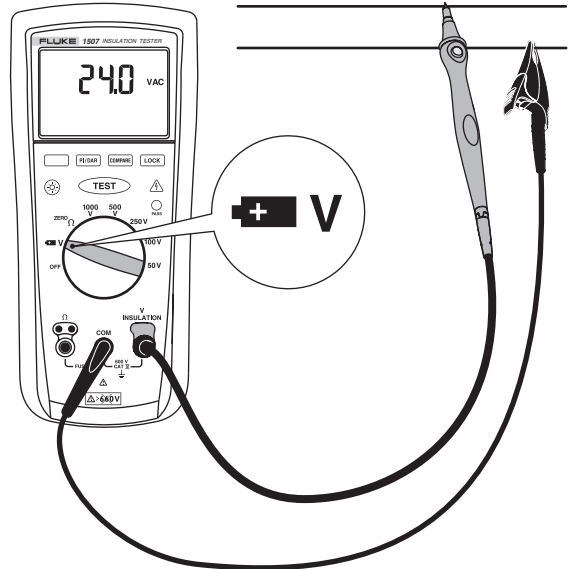


## Measuring Insulation Resistance

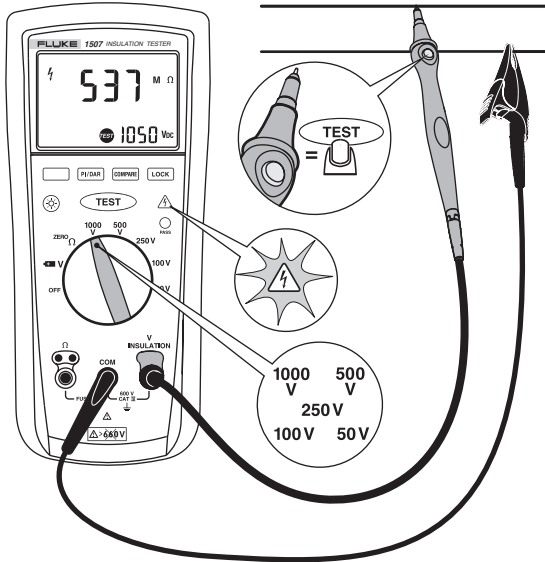

## Compare Function (1507)

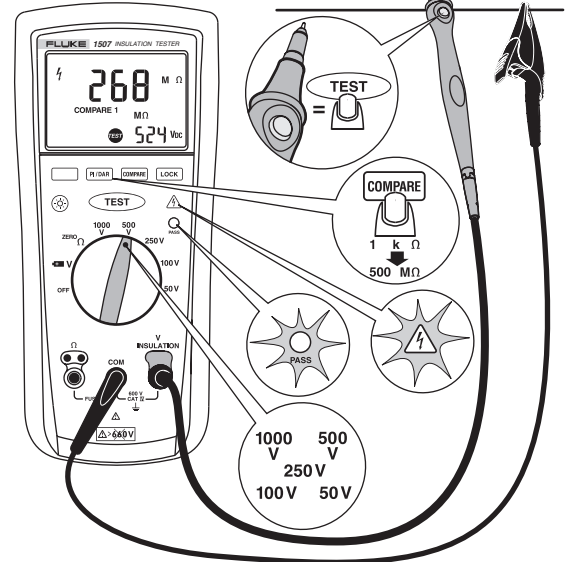

## Polarization Index and Dielectric Absorption Ratio (1507)

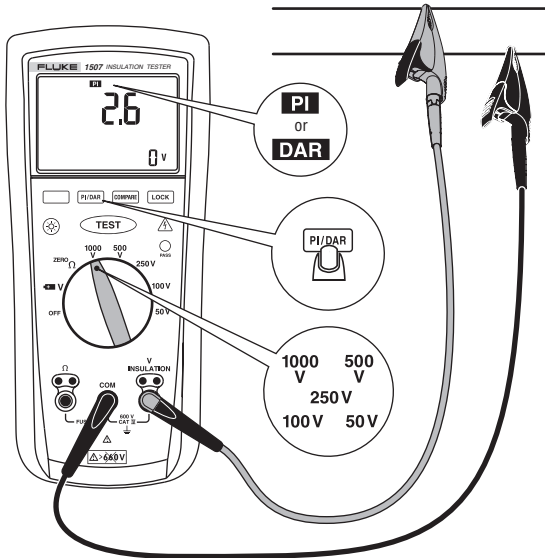

## Measuring Earth-Bond Resistance

